

PM1FID DIP SWITCH INSTRUCTION

- Gray represents the dip switch itself.
- Light gray indicates the switch should be in the upper position.
- Dark gray indicates the switch should be in the lower position.
- For example, to set the set point at 10ppm, dip switches 1 & 3 should be in the lower position.
all other dip switches should all be in the upper position.

ppm	1	2	3	4	5	6	7	8	
2									ON
4									
6									
8									
10									
12									
14									
16									
18									
20									
22									
24									
26									
28									
30									
32									
34									
36									
38									
40									
42									
44									
46									
48									
50									

ppm	1	2	3	4	5	6	7	8	
52									ON
54									
56									
58									
60									
62									
64									
66									
68									
70									
72									
74									
76									
78									
80									
82									
84									
86									
88									
90									
92									
94									
96									
98									
100									

ppm	1	2	3	4	5	6	7	8	
102									ON
104									
106									
108									
110									
112									
114									
116									
118									
120									
122									
124									
126									
128									
130									
132									
134									
136									
138									
140									
142									
144									
146									
148									
150									

ppm	1	2	3	4	5	6	7	8	
152									ON
154									
156									
158									
160									
162									
164									
166									
168									
170									
172									
174									
176									
178									
180									
182									
184									
186									
188									
190									
192									
194									
196									
198									